

# ISOLINES system variable

1649 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 1081

## Function Description:

The **ISOLINES** system variable is used to specify the number of contour lines displayed on the curved surfaces of 3D solids.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 4

**Range** : 0 ~ 2047

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1649>