

## LASTPOINT system variable

1651 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 1223

### Function Description:

The **LASTPOINT** system variable is used to store the last specified point in current UCS.

**Type** : 3D point

**Saved in** : Not saved

**Initial value** : 0.0000,0.0000,0.0000

Users could specify the last point by inputting @ symbol for reference at command prompts.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1651>