

LATITUDE system variable

1653 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 1147

Function Description:

The **LATITUDE** system variable is used to specify the latitude of geography mark.
(Read-Only)

Type : Real

Saved in : Drawing

Initial value : 37.795

Range : -90 ~ 90

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1653>