

LOCALE system variable

1671 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 1016

Function Description:

The **LOCALE** system variable is used to display the current region code.
(Read-Only)

Type : Strings

Saved in : Not saved

Initial value : Varies by country or region

This code is displayed by three-letter abbreviation.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1671>