

# LOFTNORMALS system variable

1678 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 1223

## Function Description:

The **LOFTNORMALS** system variable is used to control the normals of a lofted object when it passes through cross sections.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 6

**Range** : 0 ~ 6

If specified paths or guide curves, this system variable is ignored.

System Variable Value:

**0** : ruled

**1** : smooth fit

**2** : start cross section

**3** : end cross section

**4** : start and end cross sections

**5** : all cross sections

**6** : use draft angle and magnitude

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1678>