

# LOFTPARAM system variable

1679 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 1019

## Function Description:

The **LOFTPARAM** system variable is used to control the shapes for loft solids and surfaces.

**Type** : Bitcode

**Saved in** : Drawing

**Initial value** : 7

**Range** : 0 ~ 15

## System Variable Value:

**1** : no twist(minimize the twist between cross sections)

**2** : align direction(align the start and end directions for each section curves)

**4** : simplify(generate simple solids and surface, such as cylinder or planes, rather than spline solids or surfaces )

**8** : close(close the surface or solid between the first and last cross section)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1679>