

LOGINNAME system variable

1683 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 1107

Function Description:

The **LOGINNAME** system variable is used to display current login users name, and store it together with DWG file and relation documentation properties statistic information.

(Read-Only)

Type : Strings

Saved in : Not saved

Initial value : Unknown

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1683>