

## LWDISPLAY system variable

1689 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 909

### Function Description:

The **LWDISPLAY** system variable is used to control whether to display object lineweight.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : off

### System Variable Value:

**off** : do not display lineweight

**on** : do not display lineweight

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1689>