

MAGFADE system variable

1692 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 696

Function Description:

The **MAGFADE** system variable is used to control the transparency of magnifier.

Type : Integer

Saved in : Users-settings

Initial value : 30

Range : 1-100

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1692>