

# MEASUREINIT system variable

1700 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 992

## Function Description:

The **MEASUREINIT** system variable is used to control whether a drawing started from scratch using imperial or metric default settings.

**Type** : Integer

**Saved in** : Registry

**Initial value** : Vary by country /region

**Range** : 0,1

## System Variable Value:

**0** : imperial

**1** : metric

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1700>