

MIRRHATCH system variable

1706 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 969

Function Description:

The **MIRRHATCH** system variable is used to control how **MIRROR** reflects hatch patterns.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1

System Variable Value:

0 : keep the same direction with hatch pattern

1 : mirror hatch pattern direction

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1706>