

# OSDIVIDE system variable

1722 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 1145

## Function Description:

The **OSDIVIDE** system variable is used to specify the segments of Divide OSnap.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 3

**Range** : 3-100

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1722>