

# OPMSTATE system variable

1729 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 890

## Function Description:

The **OPMSTATE** system variable is used to specify whether the property palettes is open, closed, or hidden.

(Read-Only)

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0

**Range** : 0,1,2

## System Variable Value:

**0** : closed

**1** : open

**2** : auto hidden: when property palettes is opened it only displays title bar as cursor moving away from palettes

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1729>