

# PICKAUTO system variable

1744 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 1209

## Function Description:

The **PICKAUTO** system variable is used to control automatic windowing for object selection.

**Type** : Bitcode

**Saved in** : Registry

**Initial value** :1

**Range** : 0,1

The setting is stored as a bitcode using the sum of listed system variable values.

## System Variable Value:

**0** : close automatic windowing selection and crossing selection.

**1** : if the cursor is not located on objects, start to window or cross selection when clicking

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1744>