

PLINEWID system variable

1753 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 949

Function Description:

The **PLINEWID** system variable is used to store the default polyline width.

Type : Real

Saved in : Drawing

Initial value : 0.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1753>