

POLARDIST system variable

1759 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 988

Function Description:

The **POLARDIST** system variable is used to set snap increment when **SNAPTYPE** set to be 1.

Type : Real

Saved in : Registry

Initial value : 0.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1759>