

# SAVEFIDELITY system variable

1797 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 1372

## Function Description:

The **SAVEFIDELITY** system variable is used to control the visual fidelity for annotative objects viewing in earlier versions.

**Type** : Bitcode

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

## System Variable Value:

**0** : do not save visual fidelity when saving it

**1** : the annotative scales specified to annotation objects will be saved to their independent layers for each scale.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1797>