

# SHPNAME system variable

1817 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 1090

## Function Description:

The **SHPNAME** system variable is used to set the default shape name which must conform to symbol-naming conventions.

**Type :** Strings

**Saved in :** Not saved

**Initial value :** ""

If no specified value, returns "". Enter a period "." to specify no default value.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1817>