

# SNAPBASE system variable

1826 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 1029

## Function Description:

The **SNAPBASE** system variable is used to set the snap and grid original point for the current viewport relative to current UCS settings.

**Type** : 2D point

**Saved in** : Drawing

**Initial value** : 0.0000,0.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1826>