

# STEPSIZE system variable

1845 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 779

## Function Description:

The **STEPSIZE** system variable is used to set the size of each step by drawing units when in walk or fly mode.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 6.0000

**Range** : 1E-6 ~ 1E+6

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1845>