

# TABMODE system variable

1857 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 1044

## Function Description:

The **TABMODE** system variable is used to control the usage of digital tablet input device.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0

**Range** : 0,1

## System Variable Value:

**0** : close

**1** : open

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1857>