

TEXTEVAL system variable

1869 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 1133

Function Description:

The **TEXTEVAL** system variable is used to control how to evaluate the text strings entered by **TEXT** or **-TEXT**.

Type : Integer

Saved in : Not saved

Initial value : 0

Range : 0,1

System Variable Value:

0 : when prompting to enter text strings and attributes, all response are treated as literally.

1 : all text beginning with left bracket "(" or exclamation mark "!" will be treated as **AutoLISP** expressions, rather than non-text.

By default, all texts entered by **TEXT** command are treated as literally regardless settings of **TEXTEVAL** except executing this command completely by scripts or **AutoLISP** expressions. Under command prompts, **-TEXT** command follows settings of **TEXTEVAL**.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1869>