

# TRAYNOTIFY system variable

1884 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 980

## Function Description:

The **TRAYNOTIFY** system variable is used to control whether to display service notification in status tray.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

## System Variable Value:

**0** : do not display notification

**1** : display notification

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1884>