

TREEMAX system variable

1887 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 918

Function Description:

The **TREEMAX** system variable is used to limit regenerating drawing memory by limiting the number of nodes in the spatial index (oct-tree).

Type : Integer

Saved in : Registry

Initial value : 10000000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1887>