

UCSORG system variable

1898 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 1131

Function Description:

The **UCSORG** system variable is used to store the current users coordinate original point in current viewport of current space.

(Read-Only)

Type : 3D point

Saved in : Drawing

Initial value : 0.0000,0.0000,0.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1898>