

# UNDOMARKS system variable

1904 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 1096

## Function Description:

The **UNDOMARKS** system variable is used to display the mark number placed in UNDO control stream.

(Read-Only)

**Type** : Integer

**Saved in** :Not saved

**Initial value** : 0

If one group is currently active, the Mark and Back options are disabled.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1904>