

VIEWCTR system variable

1906 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 851

Function Description:

The **VIEWCTR** system variable is used to store the center of view in current viewport.
(Read-Only)

Type : 3D point

Saved in : Drawing

Initial value : Unknown

It is expressed by UCS coordinates.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1906>