

## XREFCTL system variables

1930 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 1281

### Function Description:

The **XREFCTL** system variable is used to control whether to create xref log files or not.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1

### System Variable Value:

**0** : do not write log files

**1** : write log files

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1930>