

# BATTORDER command


1992 GstarCAD MY /KW August 3, 2021 [CAD Commands](#) 0 954

The **BATTORDER** command is used to specify block attribute order.

**Command Access:**

**Command :** BATTORDER

**Function Description :**

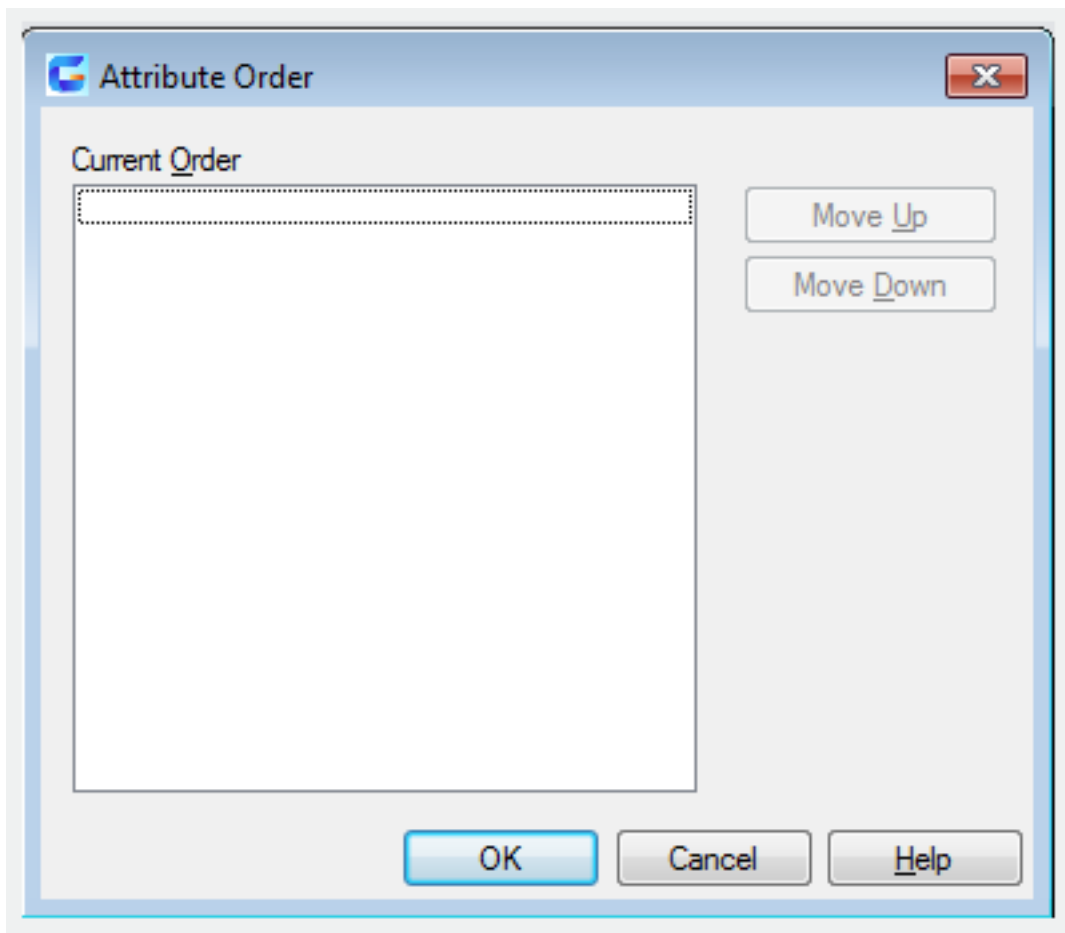

This command could only be used in block editor. The "Attribute Order" dialog box lists all block attributes. Users could arrange block attributes order in this dialog box.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1992>