## **BLIPMODE** command

2001 GstarCAD MY /KW August 4, 2021 CAD Commands 0 1265

The **BLIPMODE** command is used to control the display of blips.

## **Command Access:**


**Command**: BLIPMODE

## **Command Prompts:**

Enter new value for BLIPMODE <0>:

## **Function Description:**

When the BLIPMODE is ON, there is a temporary "+" marker appears at the specified position. If the value of BLIPMODE is 0, it is in OFF mode; if the value of BLIPMODE is 1, it is in ON mode. By default, the BLIPMODE is OFF.

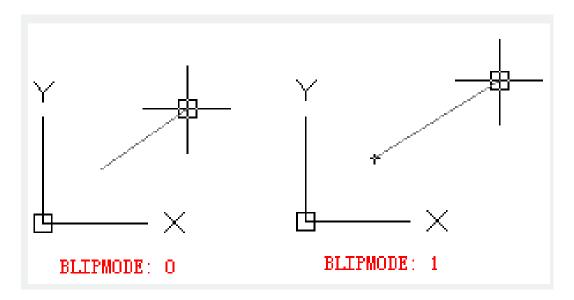

Online URL: <a href="https://www.kb2.gstarcad.com.my/article.php?id=2001">https://www.kb2.gstarcad.com.my/article.php?id=2001</a>