

# DIMOVERRIDE command

2088 GstarCAD MY /KW August 11, 2021 [CAD Commands](#) 0 1094

The **DIMOVERRIDE** command is used to control the override values of system variable in specified dimension.

## Command Access:

**Ribbon** : Annotation > Dimension > DIMOVERRIDE

**Menu** : Dimension > Override

**Command** : DIMOVERRIDE

## Command Prompts:

Enter dimension variable name to override or [Clear overrides]:

## Function Description:

Users could override dimension system variable of selected dimension or clear override of selected dimension object, they could also return to the setting defined by its dimension style.

## Relative Glossary:

### **Dimension Variable name to Override:**

Override specified dimension system variable name.

### **Clear Overrides:**

Clear specified overrides and return to the setting defined by its dimension style.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2088>