

FREESCALE command

2132 GstarCAD MY /KW August 16, 2021 [CAD Commands](#) 0 1216


The **FREESCALE** command scales an object without restrictions under three modes; Non-Uniform, Rectangle and Free.

Command name : FREESCALE

The Non-uniform scale allows to scale X and Y coordinate axis separately.

The RectScale allows to scale an object to match a rectangle frame. The rectangle does not need to be drawn, just specify two diagonal points.

The FreeScale allows to move or copy and scale objects in a closed quadrilateral frame to another closed quadrilateral frame, which can be used to generate a tilting hatch pattern or perspective distortion graphic.

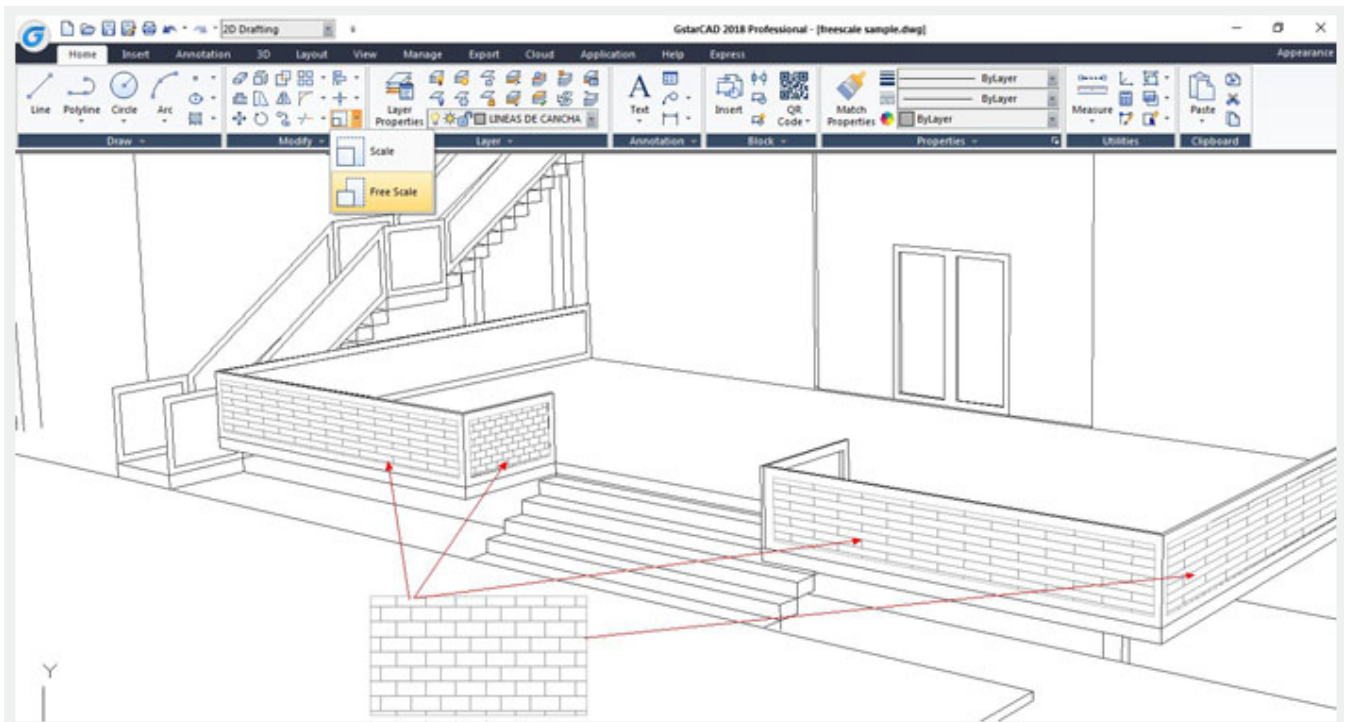

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2132>