

# LIMITS command

2201 GstarCAD MY /KW August 17, 2021 [CAD Commands](#) 0 1262

The **LIMITS** command is used to set up the boundaries of grid and control its display in current model or named layout.

## Command Access:

**Menu** : Format > Drawing Limits

**Command** : LIMITS

## Command Prompts:

Specify lower left corner or [ON/OFF] <0.0000, 0.0000>:

Specify upper right corner <420.0000, 297.0000>:

Regenerating model.

## Relative Glossary:

### Lower Left Corner:

Specify the lower left corner of grid limits.

**On** : Turn on the limits checking. In the ON mode, users could not input a point outside of limit. For points inside of grid could be checked.

**OFF** : Turn off the limits checking and keep the current value to be checked next time.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2201>