

QTEXT command

2308 GstarCAD MY /KW August 20, 2021 [CAD Commands](#) 0 1017


The **QTEXT** command is used to control the display and printing of text and its properties.

Command Access:

Command : QTEXT

Function Description:

If the QTEXT is in ON mode, all text objects and their properties objects will be displayed as frame of texts. Under this mode, it could save a lot of time to redrawing and regenerating for drawings with a large number of texts

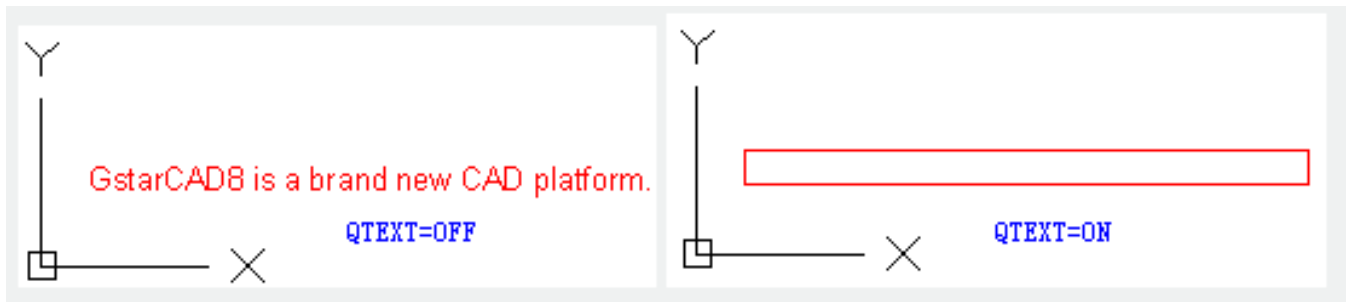

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2308>