

REDRAWALL command

2318 GstarCAD MY /KW August 20, 2021 [CAD Commands](#) 0 1277

The **REDRAWALL** command is used to refresh display of all viewports.

Command Access:

Command : REDRAWALL

Function Description:

This command could remove temporary files left by the VSLIDE command or some other operations. Users could remove scattered pixels by the REGENALL command.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2318>