

Change Block Text High

2619 GstarCAD MY /KW November 10, 2021 [Workflow](#) 0 1096

This function can change the height of the block, it only takes effect on text or mtext, attribute text can't be changed.

Menu: Express>Blocks>Change Block Text High

Command Entry: bchghei

Operation steps:

1.Start the command.



2.Input a new text height value.

3.Select objects whose text heights need to be changed.

4.Enter to finish, the result will be as below:



Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2619>