

# Delete Column

2705 GstarCAD MY /KW December 2, 2021 [Workflow](#) 0 1090


This function can delete columns you specified.

**Menu :** Express>Table Tools>Delete Column

**Command Entry :** BGSL

**Operation steps :**

1. Start the command.
2. Specify the cell of column for delete.

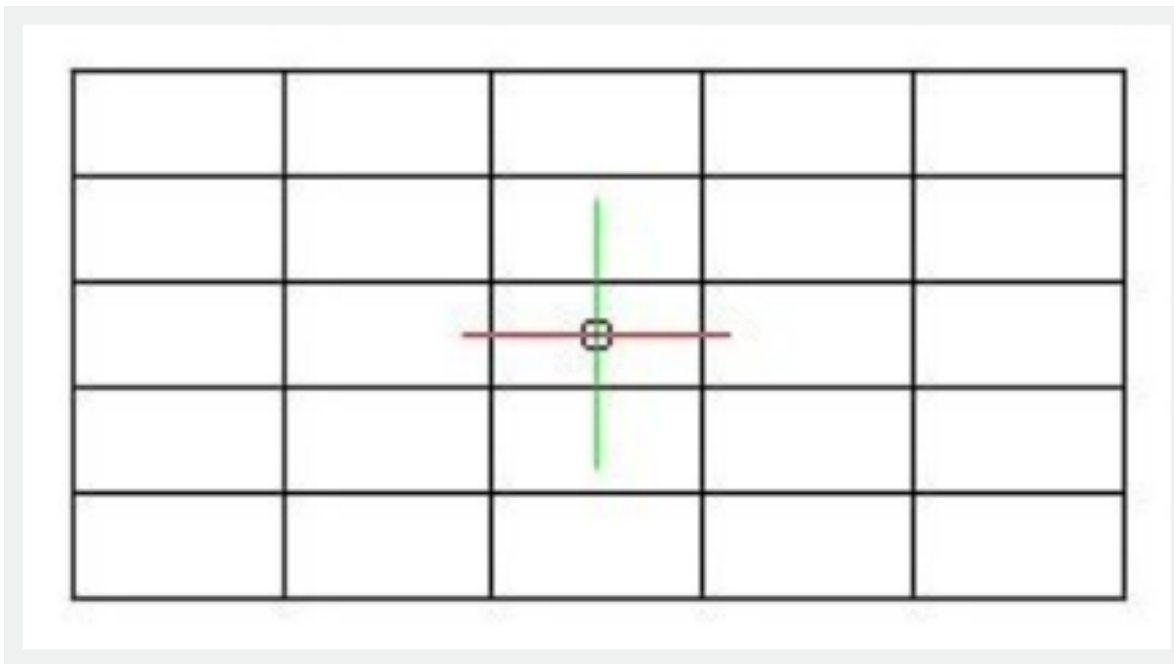

3. System will delete the column you specified.


Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2705>